



STEP 1

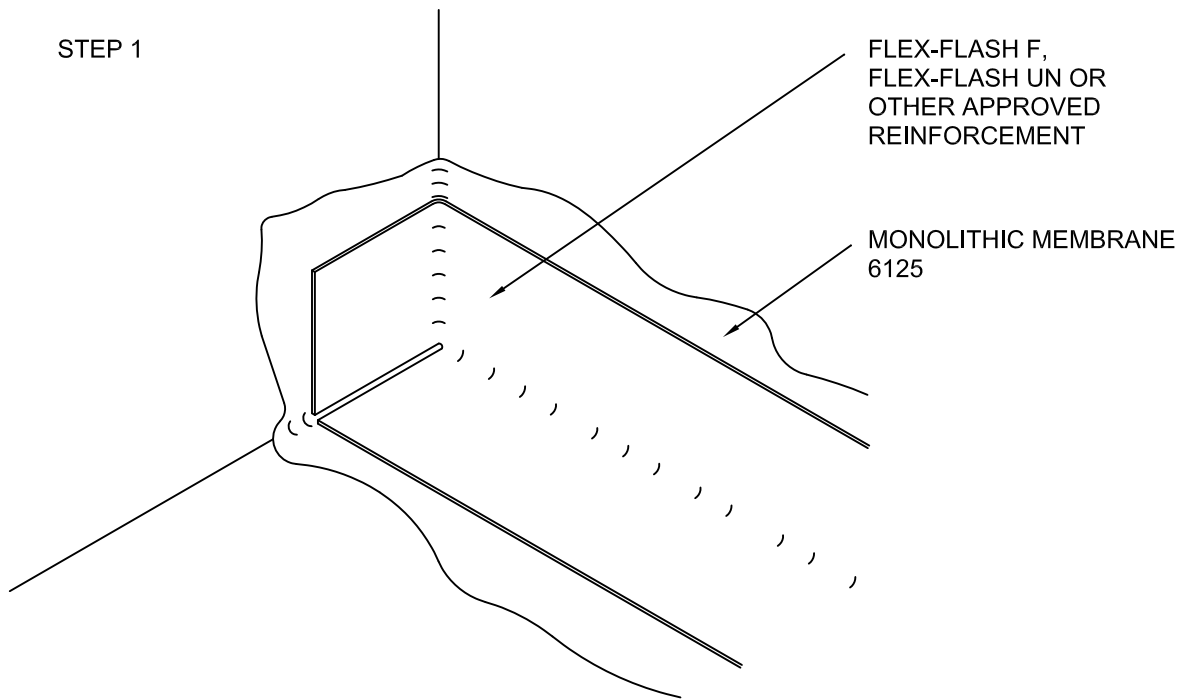

STEP 2

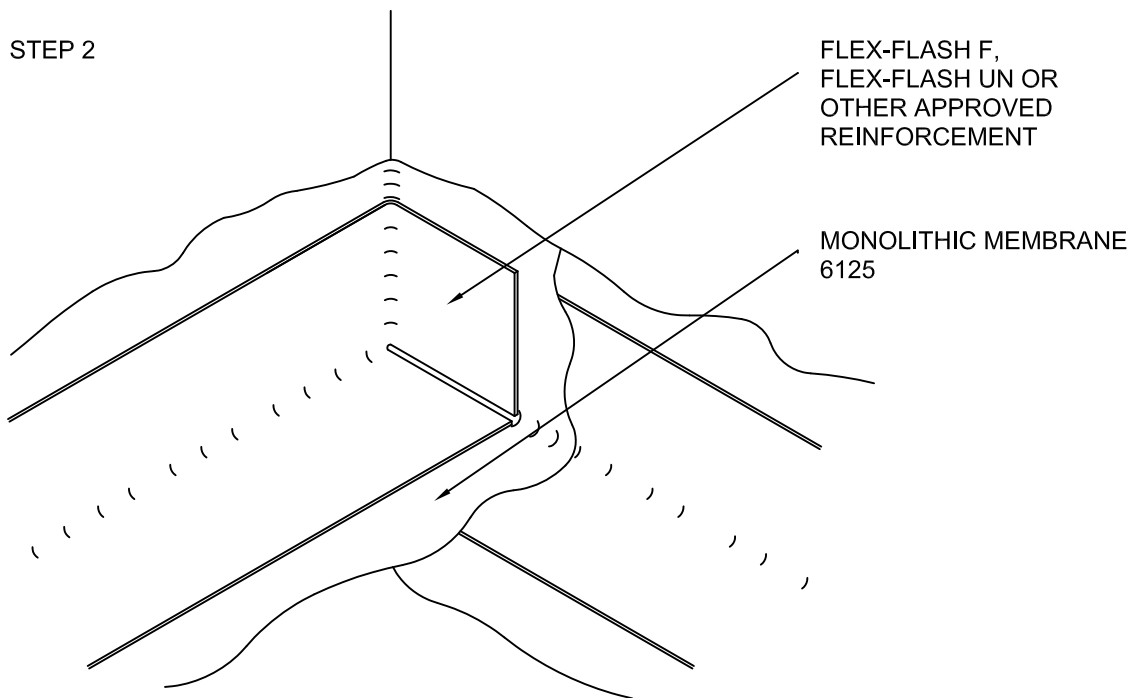

STEP 3

COMPLETELY ENCAPSULATE ALL EXPOSED REINFORCING WITH A TOP COATING OF MONOLITHIC MEMBRANE 6125. NO REINFORCING SHOULD BE LEFT EXPOSED OVERNIGHT.



Monolithic  
Membrane  
**6125-FR**  
ROOFING SYSTEMS

**AMERICAN HYDROTECH, INC.**

INSIDE CORNER  
REINFORCEMENT

SCALE: NONE  
DATE: 12/01/17

R-16A