



STEP 1

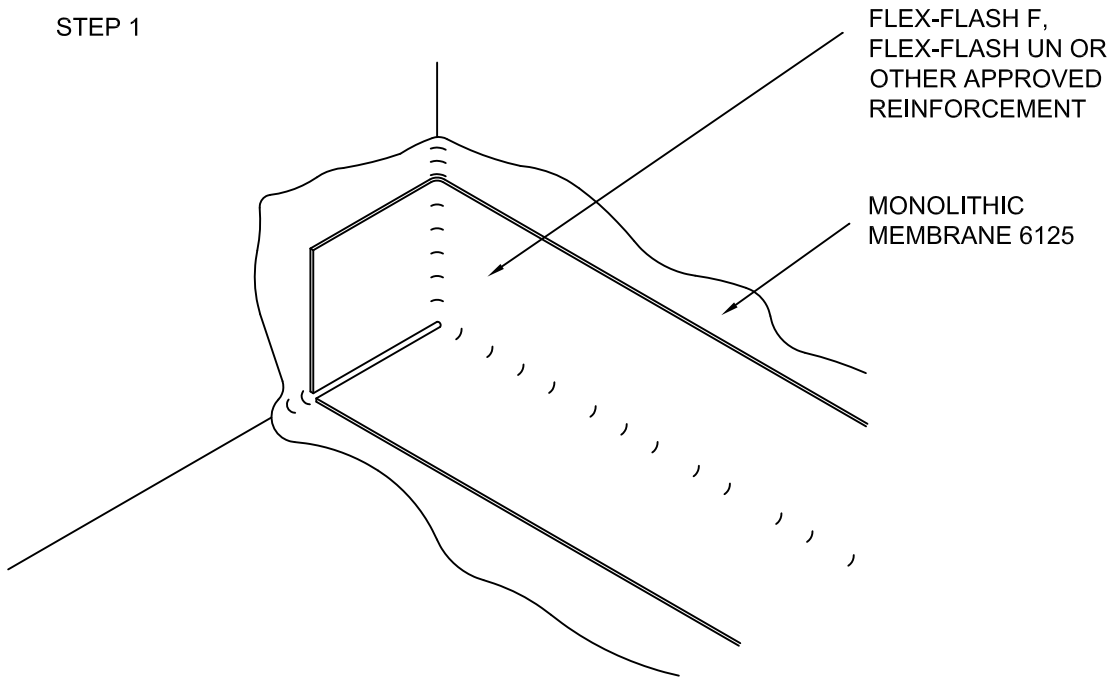

STEP 2

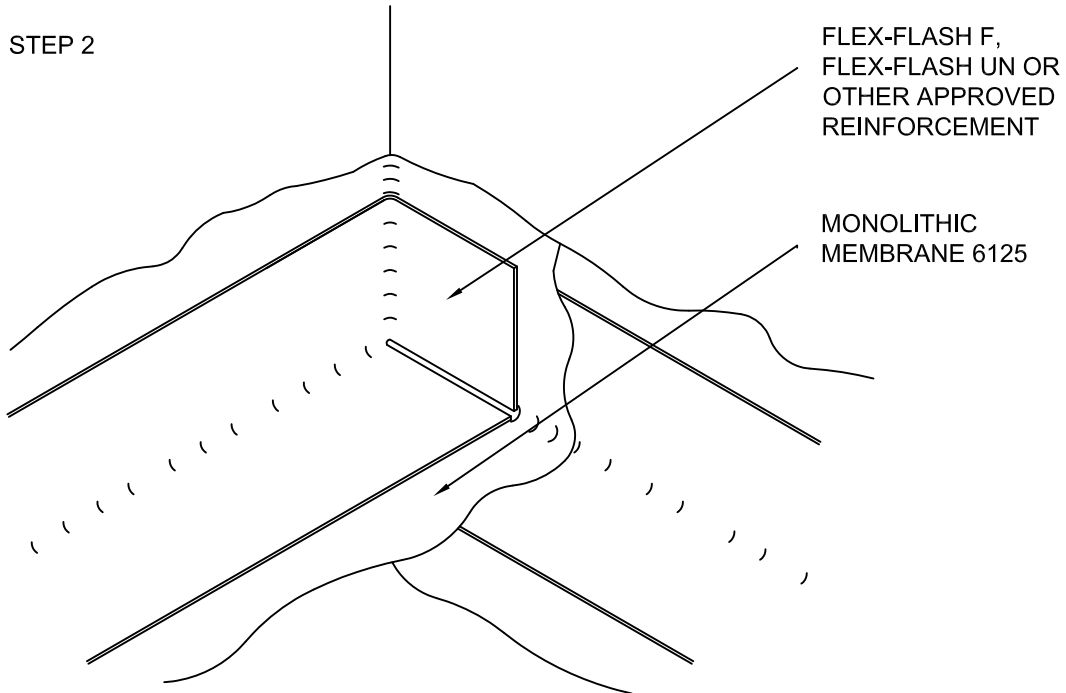

STEP 3 COMPLETELY ENCAPSULATE ALL EXPOSED REINFORCING WITH A TOP COATING OF MONOLITHIC MEMBRANE 6125. NO REINFORCING SHOULD BE LEFT EXPOSED OVERNIGHT.



Monolithic
Membrane
6125-FR
WATERPROOFING SYSTEMS

AMERICAN HYDROTECH, INC.

INSIDE CORNER
REINFORCEMENT

SCALE: NONE
DATE: 11/01/17

W-14A