


SECTION A-A



NOTES:

1. SIZE WIDTH OF DE-BONDING TAPE TO PROVIDE UN-BONDED AREA MINIMUM 5X LARGER THAN MAXIMUM ANTICIPATED MOVEMENT. FOR STATIC JOINTS, TAPE SHOULD EXTEND 2" MINIMUM PAST EDGES OF THE PLANKS.
2. TUCK HYDROSEAL FLEECE, PRE-SATURATED W/HYDROSEAL FLASHING RESIN, INTO 1/2" MIN. DEEP SAW-CUT REGLET. ONCE FLASHING RESIN HAS SET, FILL ANY REMAINING VOID WITH HYDROSEAL PASTE OR ACCEPTABLE SEALANT.
3. ANY MOVEMENT MAY CAUSE MINOR COSMETIC CRACKING/CRAZING IN ANY FINISH TOPCOAT AND/OR SURFACING APPLIED.
4. APPLICATION OF APPROPRIATE HYDROSEAL PRIMER MUST PRECEDE APPLICATION OF HYDROSEAL FLASHING AND DECK MEMBRANES.
5. ALL HYDROSEAL FLEECE, INCLUDING OVERLAPS, MUST BE SET IN AND COVERED OVER WITH HYDROSEAL RESIN.

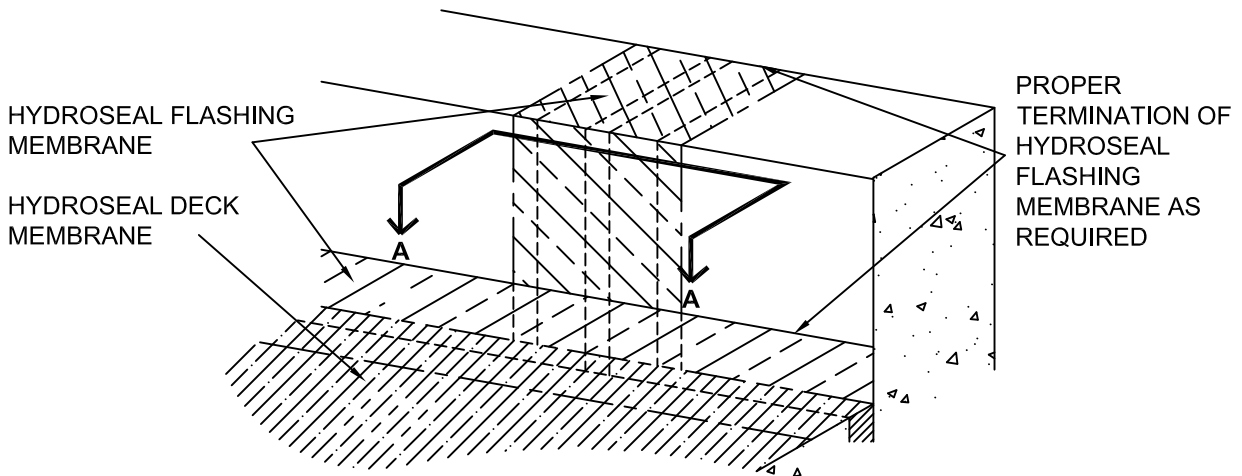

HydroSeal
Deck Membrane

AMERICAN HYDROTECH, INC.

**PRECAST WALL JOINT TREATMENT
W/PARTIAL HEIGHT FLASHING**

SCALE: NONE DATE: 07/19	HS-5C
----------------------------	-------

This information is intended only for general conceptual purposes. It is based on data and knowledge considered to be true and correct. It is offered for the user's consideration, investigation and verification and is not intended to substitute for the advice provided by appropriate professionals. Hydrotech assumes no liability for the use of this information. The determination of the suitability and applicability of this information is the sole responsibility of the user.